

# **ROKU, BLU-RAY, CHROMECAST– YOUR GUIDE TO TELEVISION ENTERTAINMENT**

## **TURN ON TELEVISION/RECEIVER**

1. Using the Yamaha remote control pressing the orange button in the upper right turns on the receiver.
2. Select HDMI input
  - a. HDMI-1: Blu Ray Player
  - b. HDMI-2: Roku Entertainment System
  - c. HDMI-3: Chromecast Streaming Device
3. Using the same remote, lower section labeled TV, press the orange button to turn on the television.
4. Use the volume buttons in the center of remote to control the television volume.

## **OPERATE ROKU DEVICE**

1. Using the Roku remote, press the upper right HOME button to wake Roku if nothing is displayed on the television
2. If the Casa Lorenzo has lost power due to a storm, you may need to unplug the device and reconnect the power to reset the device.
3. The Roku, will need to connect to the internet, so after a 1-2 minutes you should see the time on the screen, this means you are connected.
4. Use the 4-way arrow buttons to control the cursor and OK button to make your selection.

## **OPERATE BLU-RAY / DVD PLAYER**

1. Using the Yamaha remote press BD/DVD button, or select HDMI-1
2. Use the remote to the Blu-ray to control the device

## **INTERNET RADIO**

1. Using the Yamaha remote select NET to listen to streamed internet radio
2. Using the 4 directional keys and ENTER button, select the type of music you wish to listen to from radio stations throughout the world who stream their content over the internet.

## **LOCAL RADIO**

1. Using the Yamaha remote select RADIO to listen to local, Puerto Vallarta radio.
2. Use the arrow keys and ENTER keys to select the frequency of a local radio station.

## **CHROMECAST**

1. Using the Yamaha remote, select HDMI-3 to access the Chromecast device.
2. Download the Google Cast app to your device
3. Follow the instructions to connect